



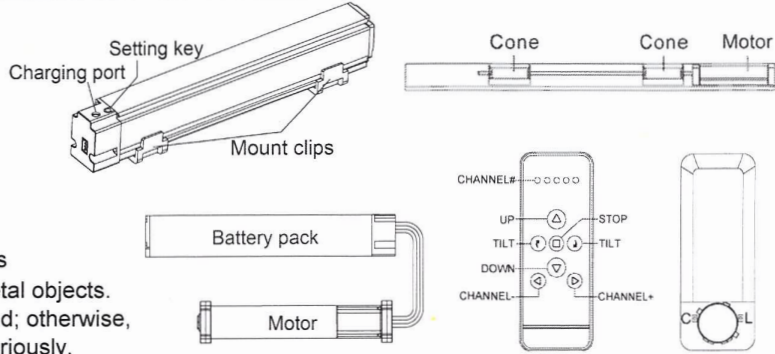
## Original Cool Motion Rechargeable Battery Motor Instruction

### Technical data

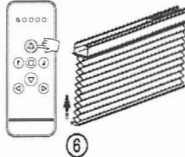
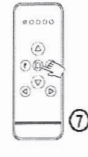
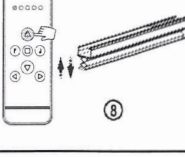
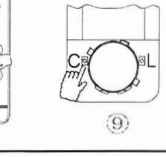
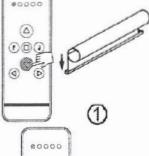
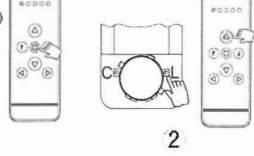
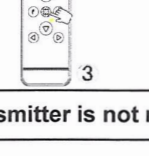
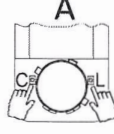
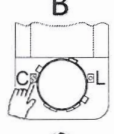
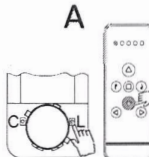
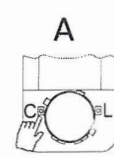
Motor Load Torque: 0.7Nm,  
Speed: 34rpm  
Battery Specification: DC7.4V/2000mAh

### Notify:

- Motor antenna should be as straight as possible in the position far away from metal objects. Directly contact metal objects is prohibited; otherwise, the receive distance will be influenced seriously.
- Please charge the battery when the motor alarm or work faltering
- Please connect battery pack and motor before do all below settings



Operation Item	Item	Operation	Result	Illustration
Program the first transmitter with motor	Please skip the step and go to next If manufacturer has programmed a transmitter with motor before delivery			
	1	Keep pressing the <b>SETTING</b> button on battery pack for more than 3 seconds	Release this button when motor jogs and beeps.	
	2	Press the <b>CONFIRM</b> button on transmitter	Motor jogs and beeps, the program has been done.	
Change motor rotate direction	1	Press <b>UP</b> button	If motor goes up, please do nothing, If motor goes down, please do next step	
	2	Press and hold <b>LIMIT</b> button then press <b>STOP</b> button	Release both buttons when motor jogs and beeps	
	3	Press <b>UP</b> button	Motor goes up, the motor rotation direction has been revised	
Setup bottom limit	The whole limit setting must finish once			
	1	Keep pressing <b>LIMIT</b> button on any programmed transmitter	Release this button when motor jogs and beeps	
	2	Press <b>DOWN</b> button on transmitter	Motor runs down	
	3	Press <b>STOP</b> button When motor running close to the end-point of bottom limit	Motor stops	
	4	Press either <b>UP</b> or <b>DOWN</b> button	Motor runs step by step to adjust bottom limit accurately	
	5	Press <b>CONFIRM</b> button on transmitter	Motor jogs and beeps, down way setting has been done.	

Operation	Item	Operation	Result	Illustration
Setup upper limit	6	Press <b>UP</b> button on transmitter	Motor runs up	
	7	Press <b>STOP</b> button When motor running close to the end-point of upper limit	Motor stops	
	8	Press either <b>UP</b> or <b>DOWN</b> button	Motor runs step by step to adjust upper limit accurately	
	9	Press <b>CONFIRM</b> button on transmitter	Motor jogs and beeps, the setting has completed.	
Set intermediate position	<b>This step only can be done after setting motor limit</b>			
	1	Press <b>DOWN</b> button	Stop motor at the position which you need	
	2	Press and hold <b>LIMIT</b> button then press <b>UP</b> button	Release both buttons when motor jogs, now the setting has completed	
3	Press <b>STOP</b> button when motor stop	Motor will run to the setting position and stops		
Program transmitter using a programmed transmitter	<b>Please skip the step and go to next if the subsidiary transmitter is not needed</b>			
	1	Keep pressing <b>LIMIT</b> button on the first programmed transmitter A, then press <b>CONFIRM</b> button	Please release both buttons once motor jogs and beeps	
2	Press <b>CONFIRM</b> button on transmitter B	Motor jogs and beeps again, now transmitter B has programmed with motor		
Delete all other transmitters	1	Keep pressing <b>LIMIT</b> button on transmitter A, then press <b>DOWN</b> button	Please release both buttons once motor jogs and beeps, now all transmitters have been deleted except A	
Delete itself from motor	2	Press <b>CONFIRM</b> button 3 times	This transmitter has been deleted from the motor	
App operation	<b>Primary New User:</b> Download APP from Apple store or Google Play use key words <b>3L SMART BLINDS</b> , please do follow 3 steps to do App settings 1. Set motor in discoverable status: Press <b>SETTING</b> button 3 times and motor will sound one beep 2. Register a new account after download App 3. Follow all instruction at APP interfaces to continue program or operations			
	<b>Next Family user:</b> Download APP from Apple store or Google Play use key words <b>3L SMART BLINDS</b> , Please synchronize an exiting App account settings from Primary user follow " <b>Settings</b> " → " <b>Sync with exiting account</b> "			
FAQ	<ul style="list-style-type: none"> <li>● Whether motor and battery apck connect well</li> <li>● Whether have reset motor Bluetooth and let it in discooverable status</li> <li>● Whether your cell phone Bluetooth allow to access</li> <li>● Whether the motor runs to one direction continually or just jogs, the user didn't setup limit successfully, please re-set motor limit.</li> </ul>			