


For Regular Shades

Insert 3 mm Allen Key (A) into the slot (B) on the side of the shade. Turn **CLOCKWISE** to give more tension or **COUNTER-CLOCKWISE** to loosen tension on the shade.

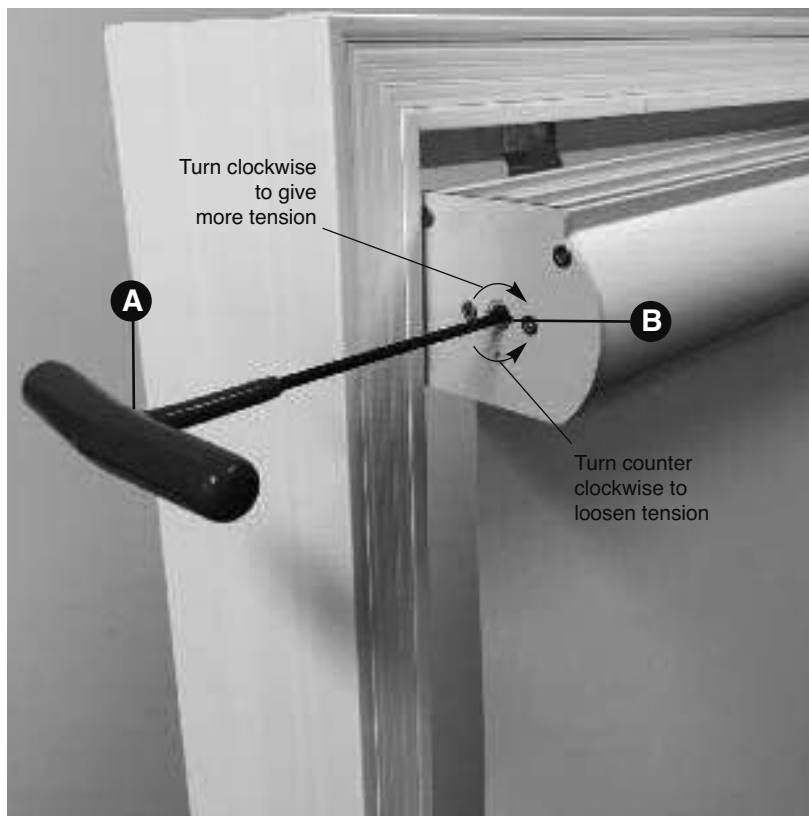

For Opera/Double Shades

Insert 3 mm Allen Key (A) into the slot (B) on the side of the shade. Turn **COUNTER-CLOCKWISE** to give more tension or **CLOCKWISE** to loosen tension on the shade.



MAXXMAR WINDOW FASHIONS

150 Bator Road, Toronto, Ontario M9M 1H1

Tel: 416-742-6299 - Toll Free: 1-866-916-6299 - Fax: 416-742-1772

www.maxxmar.com



WARNING STRANGULATION HAZARD

Young children can be strangled by cords. Immediately remove this product if a cord longer than 22 cm or a loop exceeding 44 cm around becomes accessible.

MISE EN GARDE RISQUE D'ÉTRANGLEMENT

Les enfants en bas âge peuvent s'étrangler avec des cordes. Enlevez immédiatement ce produit si une corde mesurant plus de 22 cm devient accessible ou si le contour d'une boucle de plus de 44 cm devient accessible.