



CHILD SAFE

MIRACLE FIT & MIRACLE CHANNEL INSTALLATION INSTRUCTIONS



MAXXMAR WINDOW FASHIONS

150 Bartor Road, Toronto, Ontario M9M 1H1

Tel: 416-742-6299 - Toll Free: 1-866-916-6299 - Fax: 416-742-1772

www.maxxmar.com



⚠️ WARNING STRANGULATION HAZARD

Young children can be strangled by cords. Immediately remove this product if a cord longer than 22 cm or a loop exceeding 44 cm around becomes accessible.

⚠️ MISE EN GARDE RISQUE D'ÉTRANGLEMENT

Les enfants en bas âge peuvent s'étrangler avec des cordes. Enlevez immédiatement ce produit si une corde mesurant plus de 22 cm devient accessible ou si le contour d'une boucle de plus de 44 cm devient accessible.

Getting Started

A few simple tools are required:


- Utility Knife
- Measuring tape
- Pencil





Miracle Fit: General Product Overview




1. Miracle Fit comes in a two piece set always, Miracle Fit Base and Miracle Fit Extension.
2. For Installation the Miracle Fit Base has two sided tape attached to it that is peeled off when installing on the inside of the window trim. If necessary silicone can also be used around the edges of the base or screws can be drilled through the back lip of the base for extra support.
3. Optimum positions for installing the Miracle Fit is either directly behind the fabric of the shade or parallel to the fabric of the shade depending on the needs of the customer. The Standard 1 1/2 " Miracle Fit will be used the vast majority of times as gaps on the sides of the shades or blinds rarely exceed 1".
4. For shipping and packaging purposes, when the Miracle Fit is ordered with shades or blinds at the time of order the Base will be cut to the maximum width of the blind and you may have multiple pieces of the Base being sent depending on the height of the shade ordered but the Extension will always be the full height of the shade or blind ordered in one full length piece.
5. Miracle Fit is shipped two times the height of the shade as it goes on both sides and we will round up to the nearest foot. If a Miracle Fit Sill Option is required then you require two times the height and one time the width of the shade to be ordered for the Miracle fit.

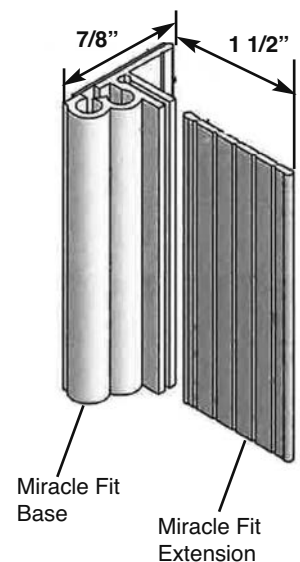


Miracle Fit: Installation Instructions when ordered cut to size with shades.

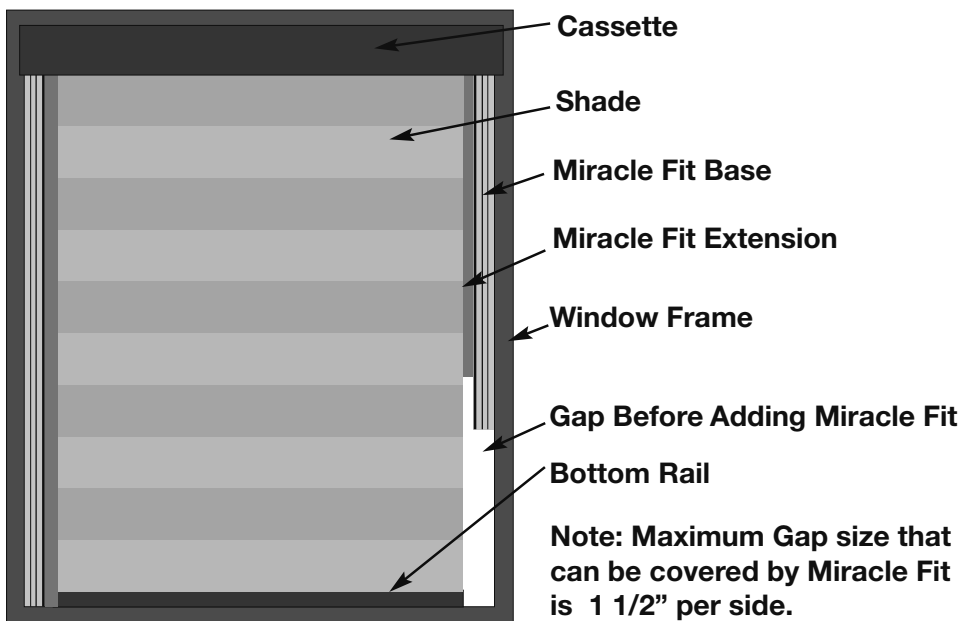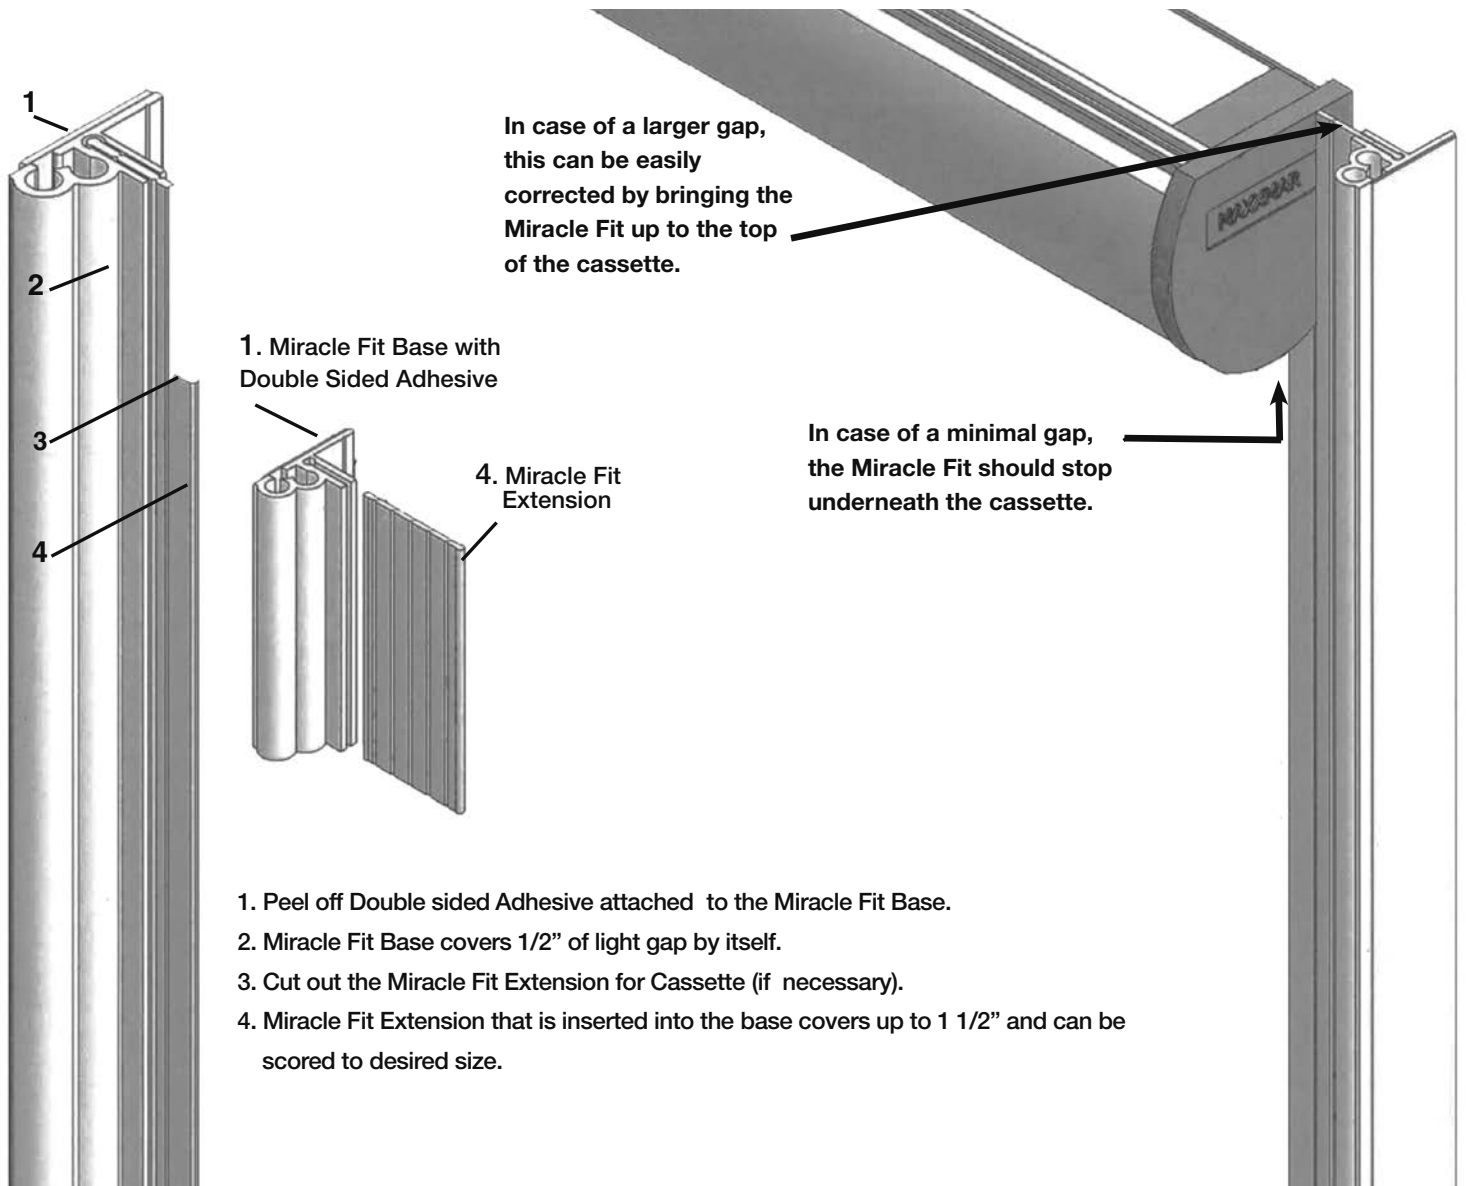


Miracle Fit: Installation Instructions when ordered cut to size with shades.

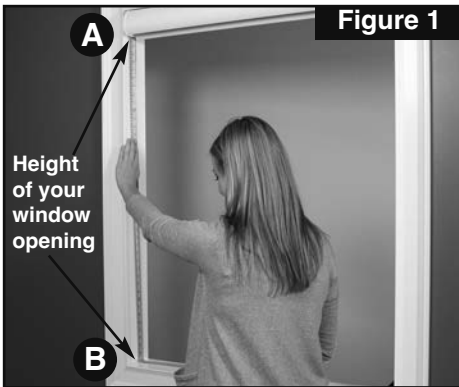

Step 1: Measure the height of your window opening. See Figure 1 (A - B).

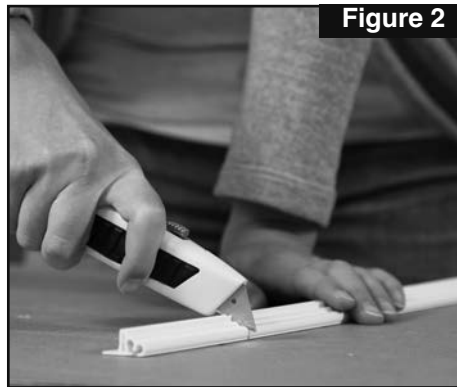

Step 2: Cut Miracle Fit Base with a saw or utility knife to fit into the height size of window. See Figure 1 (A-B).

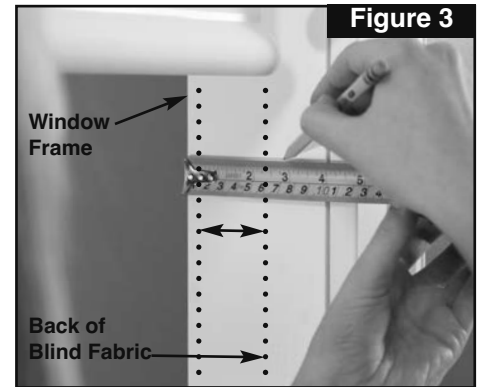


Step 3: Measure from the window frame to the back of the blind fabric marking with a pencil in three different places top, middle and bottom.


Draw a perpendicular connecting line and place Miracle Fit Base in alignment with the perpendicular connecting line.



Step 4: Peel off double sided adhesive from behind the Miracle Fit Base.

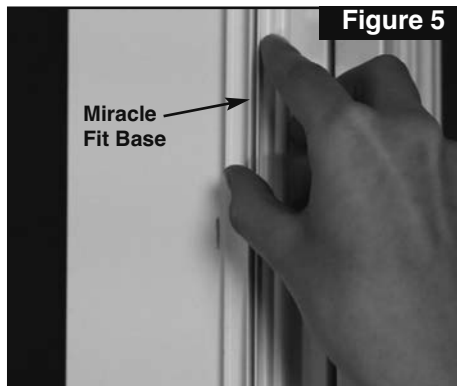

Step 5: Press into place along the full height of the opening always following your perpendicular connecting lines which should be in line with the blind in the closed position.

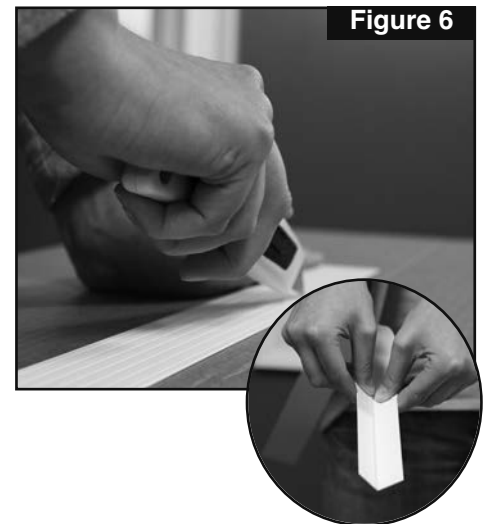

Step 6: If necessary score and break away the Miracle Fit Extension to the desired width so that the gap between the wall and the blind is covered. Also cut the Miracle Fit extension to the desired height as shown in Figure 1 (A-B).

Please insert and snap in the Miracle Fit Extension into the Miracle Fit Base. See Figure 5.

**Please view the
Miracle Fit Video at:
www.maxxmar.com**

MIRACLE CHANNEL

INSTALLATION INSTRUCTIONS




Miracle Channel: Product Overview and Installation Instructions

1. The Miracle Channel will act as a light block on the sides of the shade as the fabric of the shade attached to the tear drop bottom rail will go up and down inside the Miracle Channel. A felt piece in white or grey will be inserted into a small groove inside the Miracle Channel to keep the fabric flush within the Miracle Channel.
2. Miracle Channel is shipped two times the height of the shade as it is placed on both sides and we will round up to the nearest foot. If a Miracle Channel Sill Option is required then you will receive the Miracle Channel at two times the height and one time the width of the shade.
3. Installation: Measure the height of your window opening from the window sill to the cassette of the shade. Using a utility knife, trim the Miracle Channel to size for each side of the window. The Miracle Channel has two sided tape attached to the base that is peeled off when installing on the inside of the window trim. If necessary silicone can also be used around the edges of the base or screws can be drilled through the inside of the channel for extra support.

Getting Started

A few simple tools are required:

- Utility Knife
- Measuring tape
- Pencil

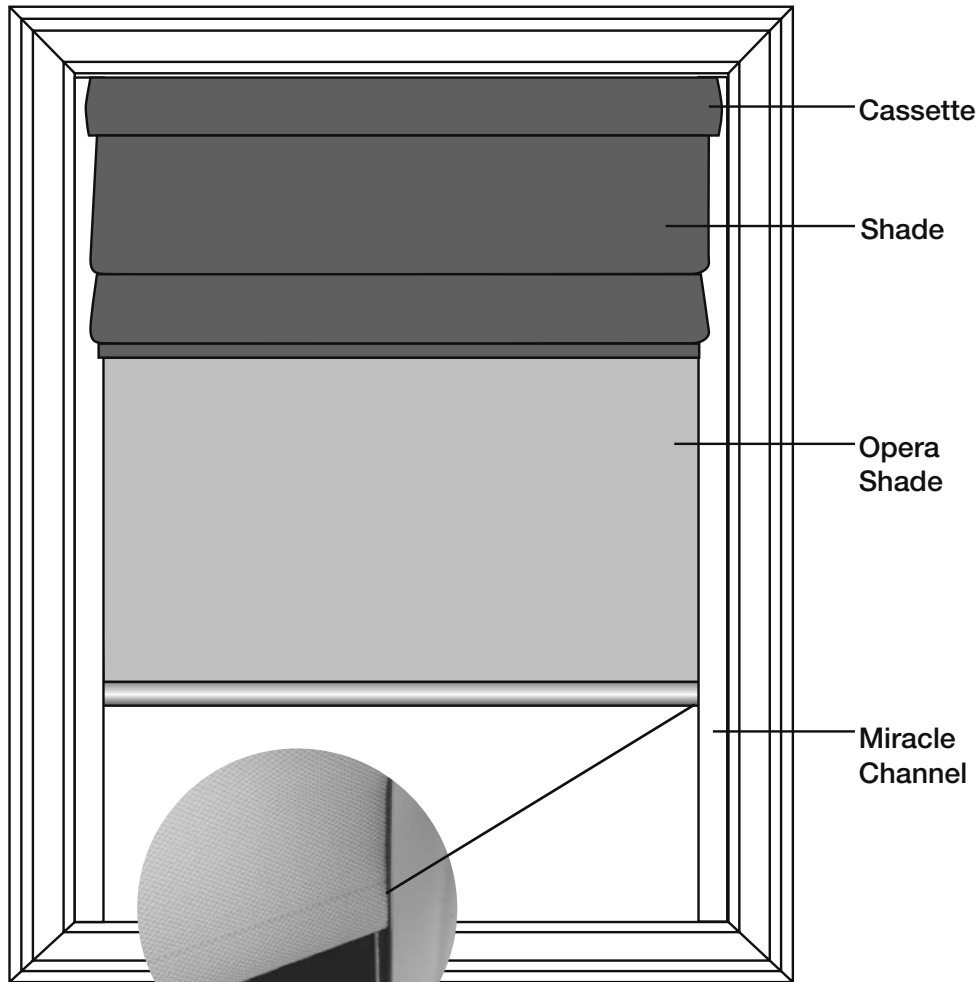


Cassette

Shade


Opera
Shade

Miracle
Channel

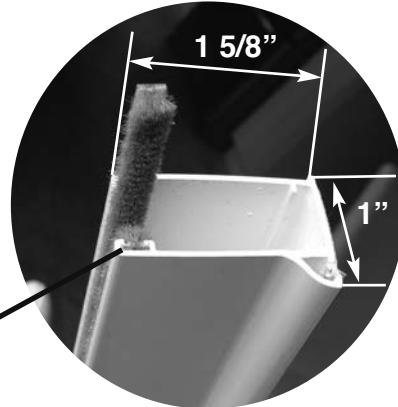


Crimp channel
to keep felt
stationary.


Miracle Channel: Installation Instructions

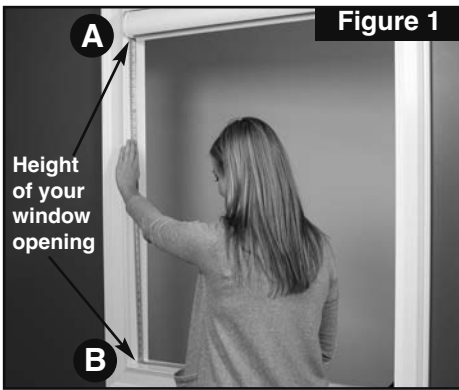

Step 1: Measure the height of your window opening. See Figure1 (A - B).

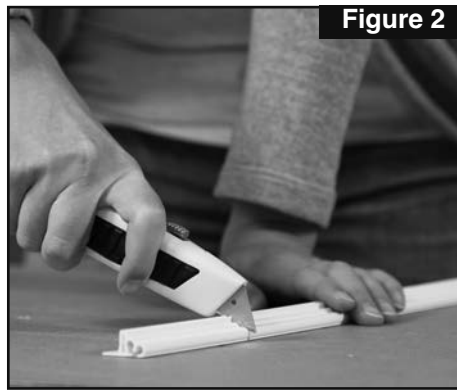

Step 2: Cut Miracle Channel with a saw or utility knife to fit into the height size of window. See Figure 1 (A-B).

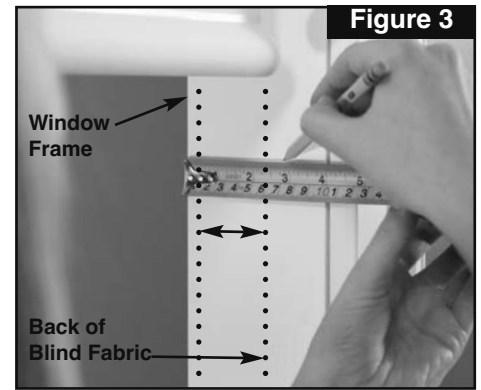


Step 3: Measure from the window frame to the back of the blind fabric marking with a pencil in three different places top, middle and bottom.


Draw a perpendicular connecting line and place Miracle Channel in alignment with the perpendicular connecting line.



Step 4: Peel off double sided adhesive from behind the Miracle Channel.

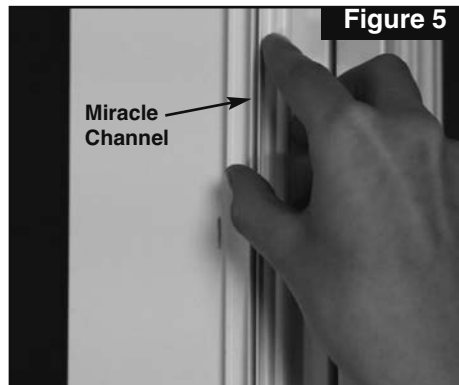

Step 5: Press into place along the full height of the opening always following your perpendicular connecting lines which should be in line with the blind in the closed position.

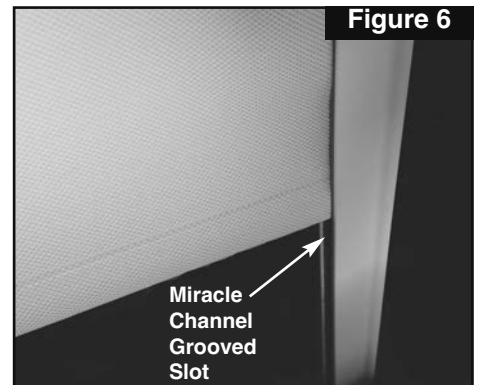

Step 6: Once the Miracle Channels are in place, insert and slide the shade bottomrail into the Miracle Channel grooved slots.

